





Maintenance Schedule


Regular Service Period	Each use	First month or 10 Hours	Every 3 months or 50 Hours	Every 6 months or 100 Hours	Every 2 years or 300 Hours
Engine oil	Check	Change		Change	
Air cleaner	Check		Clean		
Spark plug				Check-adjust	Check-adjust
Valve clearance					Check-adjust
Combustion chamber					Every 300 Hours
Fuel tank & filter					Every year
Fuel tube					Every 2 years (Replace if necessary)

* Clean the air cleaner more frequently when used in dusty areas every.


* Read and understand the Owner's Manual before operating the generator.

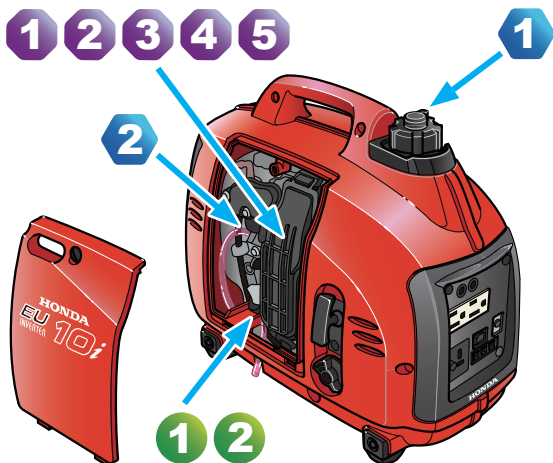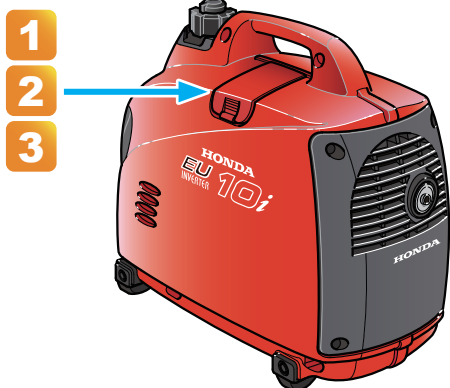

Spark Plug

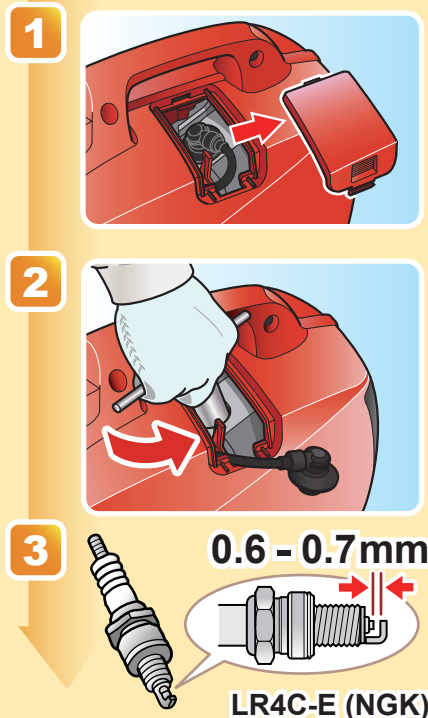

Engine Oil

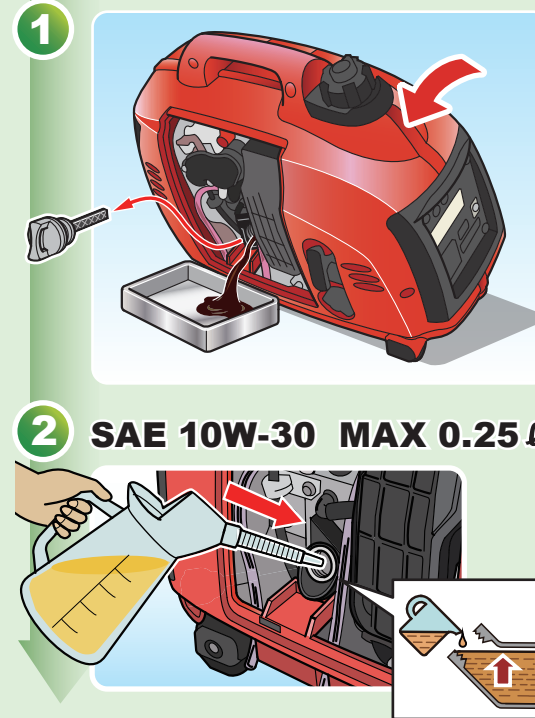

Prolonged storage



Air Cleaner Element

