



Maintenance Schedule


Regular Service Period	Each use	First month or 20 Hours	Every 3 months or 50 Hours	Every 6 months or 100 Hours	Every year or 200 Hours
Engine oil	Check	Change	Change	Change	Change
Air cleaner	Check		Change		
Spark plug				Check-adjust	Check-adjust
Valve clearance					Check-adjust
Fuel tank & filter					Check
Combustion chamber					Check
Fuel tube					Check

Take the generator to a Honda servicing dealer.


Every 300 Hours

Every 2 years (Replace if necessary)

* Clean the air cleaner more frequently when used in dusty areas.

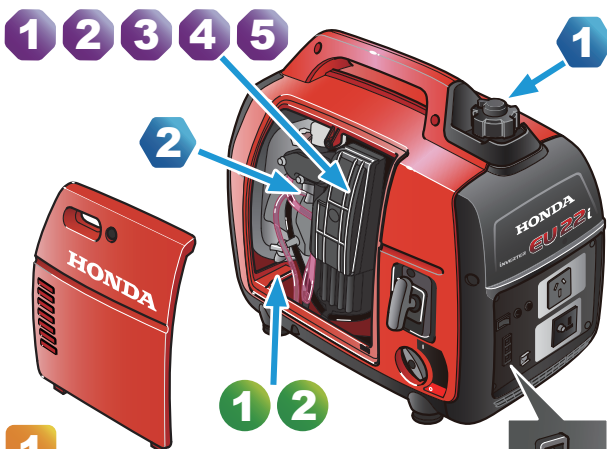


Output Indicator
(Hour Meter Function)

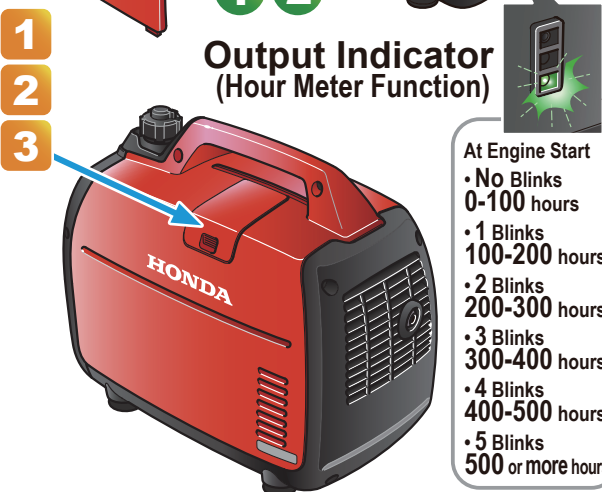

At Engine Start
• No Blinks 0-100 hours
• 1 Blink 100-200 hours
• 2 Blinks 200-300 hours
• 3 Blinks 300-400 hours
• 4 Blinks 400-500 hours
• 5 Blinks 500 or more hours

Spark Plug

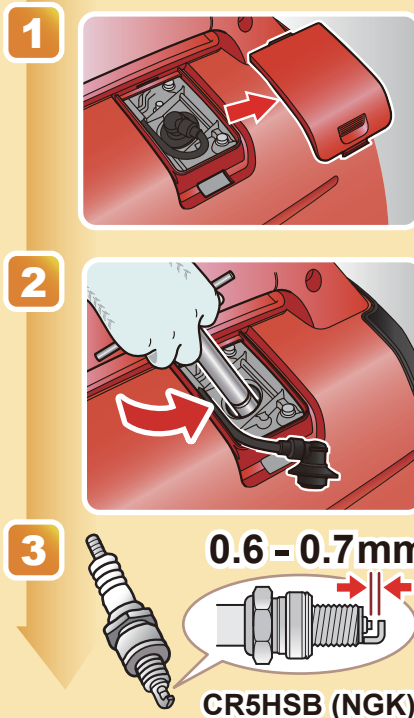

Engine Oil



Prolonged storage



Air Cleaner Element



* Read and understand the Owner's Manual before operating the generator.