



### Maintenance Schedule

: Check 
 : Change 
 : Clean 
 : Check-adjust

Regular Service Period	Before each use	First month or 10 Hours	Every 3 months or 25 Hours	Every 6 months or 50 Hours	Every year or 100 Hours	Every 2 years or 300 Hours
Engine oil						
Air cleaner				Service more frequently when used in dusty areas.		
Spark plug						
Spark arrester						
Exhaust filter						
Engine coolingfans						
Bolts and nuts		Retighten if necessary				
Fuel filter						
Fuel tank						

Timing belt		After every 300 hrs.				
Clutchshoe Drum						
Idle speed		Take the Engine to a Honda servicing dealer.				
Valve clearance						
Combustion chamber						
Fuel tube						
Oil tube		Every 2 years	Replace if necessary			

\* Read and understand the Owner's Manual before operating the Engine

### Engine Oil

SAE 10W-30  
MAX 0.08 l

### Air Cleaner Element

- 
- Clean**
- Squeeze**
- Oil**
- Squeeze**
- Clean**

### Spark Plug

- 
- 
- 0.6-0.7mm  
  
CMR5H (NGK)

### Spark arrester/Exhaust filter

Clean Exhaust filter

Spark arrester

### Prolonged storage

- 
- 
- 
-