

HONDA Quick Reference Guide for Maintenance

WH20XT JF type




Maintenance Schedule : Check : Change : Clean : Check-adjust : Grease up

Regular Service Period	Each use	First month or 20 hrs.	Every 3 months or 50 hrs.	Every 6 months or 100 hrs.	Every Year or 300 hrs.
Engine oil					
Air Cleaner					
Spark plug					
Sediment Cup					

Idle speed					
Valve clearance		Take the Pump to your Honda servicing dealer.			
Fuel tank and filter					
Combustion chamber			After every 500 hrs.		
Fuel tube			Every 2 years Replace if necessary		
Impeller					
Impeller clearance					
Pump Inlet valve					

* Service more frequently when used in dusty areas.

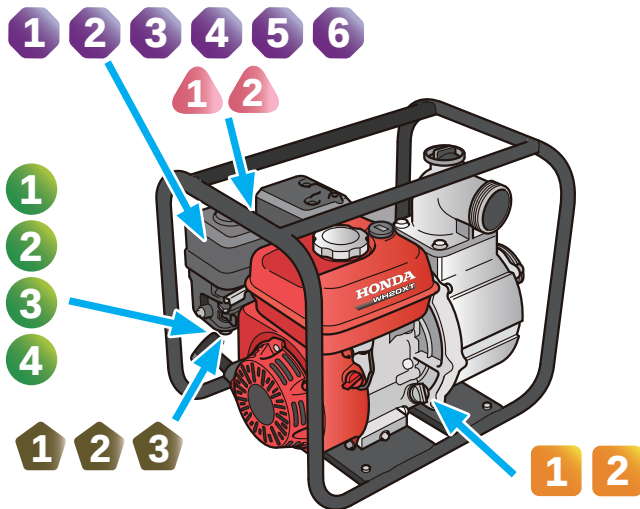


Air Cleaner Element


* Read and understand the Owner's Manual before operating the Pump.



Engine Oil

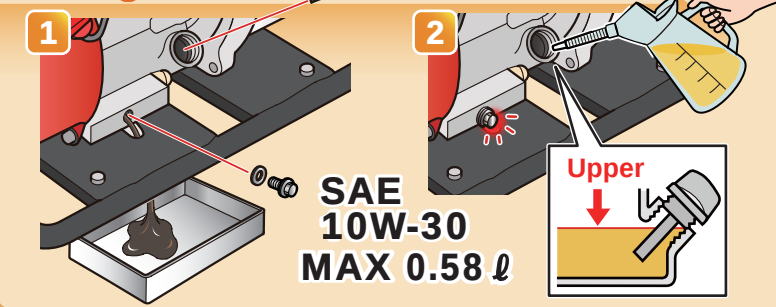


Spark Plug

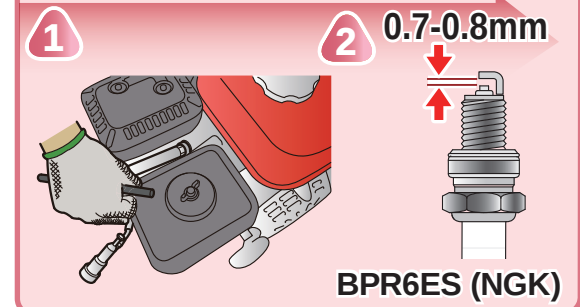


Storage

Carburetor Drain

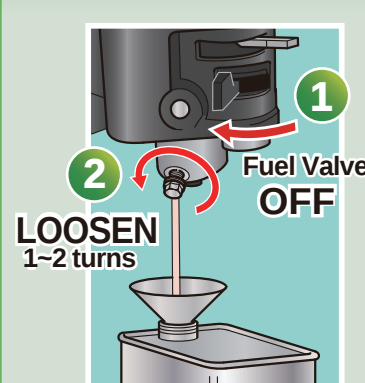

Fuel tank Drain

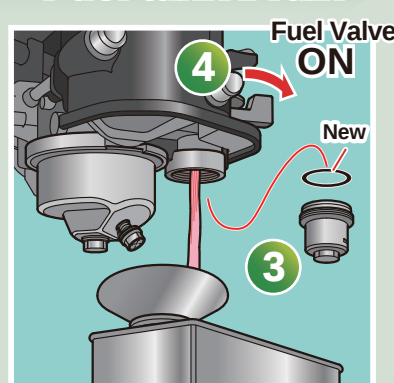

Sediment Cup

